

No Pump Sprayer Wand





DEFINITIONS

DANGER: Indicates a hazardous situation that, if not avoided, **WILL result in death or serious injury.**

WARNING: Indicates a hazardous situation that, if not avoided, COULD result in death or serious injury.

CAUTION: Indicates a hazardous situation that, if not avoided, COULD result in minor or moderate injury.

NOTICE: Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).

A DANGER

RISK OF DEATH, SEVERE PERSONAL INJURY AND/OR PROPERTY DAMAGE FROM IMPROPER CHEMICAL USE OR MIXTURE.

- Never use flammable or combustible chemicals in this Sprayer Wand. Spraying flammable or combustible chemicals can create combustible fumes that could be ignited, causing an explosion.
- Use only chemicals indicated for spraying applications. Some chemicals may create a toxic or other hazardous atmosphere when sprayed.
- Always follow the chemical manufacturer's instructions some chemicals may be hazardous when used with this Sprayer Wand.
- Always refer to chemical manufacturer's instructions and/or the chemical Safety Data Sheet (SDS) for proper mixture and safe application.

AWARNING

RISK OF PERSONAL INJURY AND/OR PROPERTY DAMAGE DUE TO CHEMICAL EXPOSURE.

- Follow all instructions and precautions when using this Sprayer Wand.
- Read and follow all instructions and precautions on chemical manufacturer's label of chemicals used in this Sprayer Wand.
- Use the appropriate Personal Protective Equipment (PPE) as recommended by the chemical manufacturer and/or refer to the chemical Safety Data Sheet (SDS) of the chemical being used. This includes at least goggles, gloves, and protective clothing. Failure to use appropriate PPE could result in chemical exposure through skin contact, eye contact, inhalation, or other means.
- Prior to initial use, or after extended storage or any possibly damaging event, such as a fall, always inspect
 the Sprayer Wand for damage, and test it with plain water to check for proper function, prior to using the
 Sprayer Wand with chemical.
- Always inspect the nozzle and connection before each use. A damaged nozzle or loose connection could
 result in an uncontrolled discharge of chemical.
- Do not spray near open flame, hot surfaces, or anything that could vaporize the spray. Doing so could create a dangerous chemical atmosphere.
- Never use caustics, bleach, acids or hot water in this Sprayer Wand.
- Keep the Sprayer Wand and all chemicals out of the reach of children and pets.
- Only spray when the air is calm (no wind or air movement) to prevent chemical spray from drifting onto non-targeted surfaces.
- Never spray towards other people or pets.
- Never store chemicals in the Sprayer Wand.
- Clean Sprayer Wand after each use to avoid unintended chemical exposure and prevent contamination of subsequent applications.
- Store Sprayer Wand in a warm, dry, dust-free location out of direct sunlight.
- This sprayer is not intended for consumable liquids of any kind.

AWARNING

Battery acid leakage can cause personal injury and cause damage to the product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears nose and mouth. Immediately wash any clothing or surfaces that come in contact with leaked battery acid. If a chemical burn occurs or if irritation persists, seek medical attention. Dispose according to local governing bodies.

AWARNING

Never mix old and new batteries or different brands of batteries. Replace all batteries at the same time. Never mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries with this product. Never dispose of batteries in fire, as they may leak and explode. Always remove exhausted batteries from the product. Batteries are to be inserted following polarity marking on the product. Remove batteries before extended storage.

HDX™ Feature Call-outs

ADJUSTABLE Nozzle-

ARTICULATING Wand

EASY PRESS Trigger and Lock-

ERGONOMIC Comfort Grip -

INCLUDED Adapter Cap and Dip Tube fits any 38mm Ready-to-Use Chemical Bottle

OPERATES on 4 AA Batteries (included)



How to Operate



STEP 1
Remove existing

Remove existing cap and replace with ready-to-use adapter cap and dip tube.



STEP 2

Snap the pump hose onto the adapter cap.



STEP 3

Unfold the wand.



STEP 4

Unlock the trigger. Squeeze to spray.

After Use Care



STEP 1

Remove universal cap and sprayer from the bottle.



STEP 2

Spray remaining fluid out of the sprayer and hose.



STEP 3

Submerge Dip Tube into fresh water and flush sprayer for 5





STEP 1

Pinch tabs at base of the sprayer handle to remove cover.



STEP 2

Open door and replace the four (4) AA alkaline batteries.



STEP 3

Snap cover on to Sprayer Wand before use.