

90G CARRY RACK INSTALLATION

1


BOLT RACK TO FLOOR OF COMPARTMENT
OR RUNNING BOARD USING THE CARRIAGE
BOLTS SUPPLIED.

2

FASTEN LONGER
STRAP ON BACK
OF RACK BASE.

3

FASTEN SHORTER
STRAP WITH
BUCKLE ON FRONT
SIDE OF RACK BASE

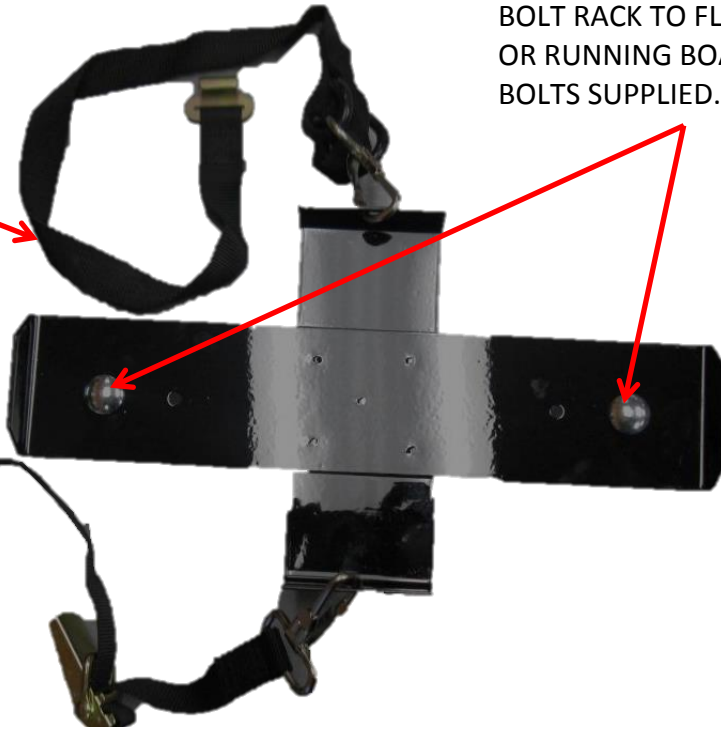

TONGUE OF SNAP
HOOK TO FACE
TOWARDS THE
OUTSIDE OF RACK.



4




SHORT STRAP SHOULD
BE LACED THROUGH
BUCKLE AS SHOWN

5



PLACE REAR STRAP
OVER THE TANK AS
SHOWN

6

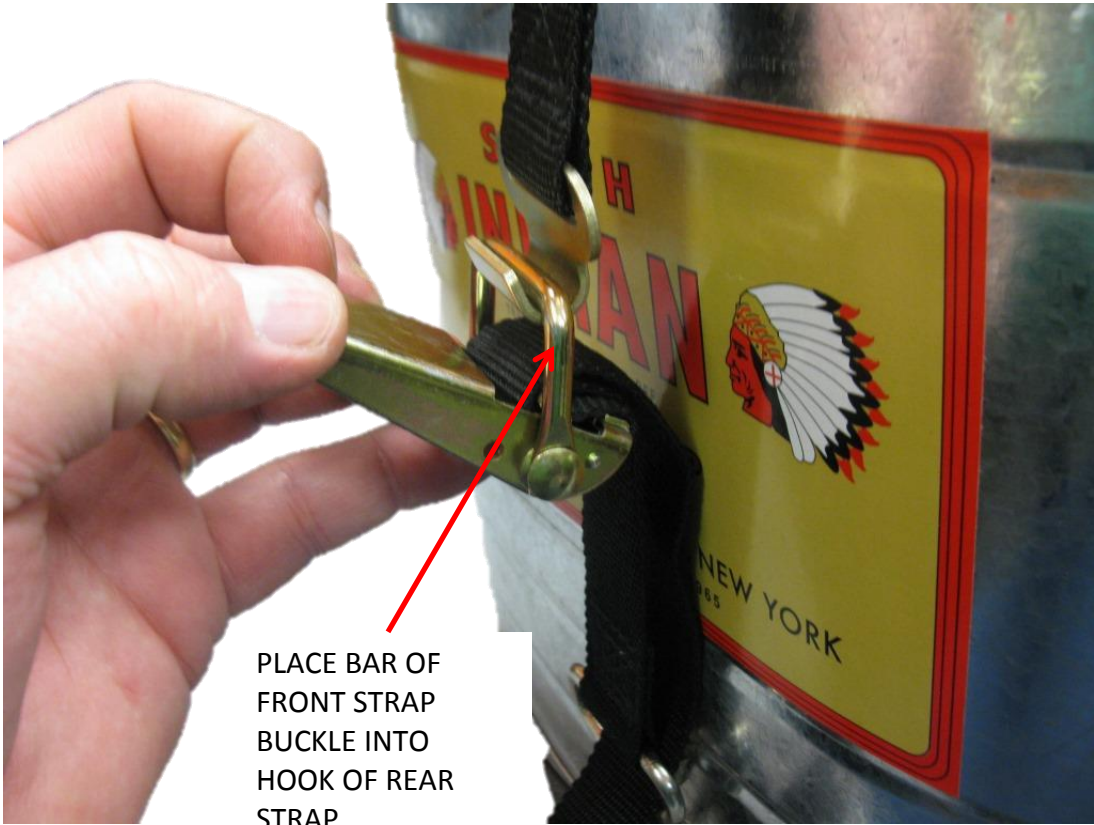

PLACE BAR OF
FRONT STRAP
BUCKLE INTO
HOOK OF REAR
STRAP.

7



PUSH DOWN
BUCKLE LEVER
TO LOCK IN PLACE.

*(ADJUST THE BUCKLE
POSITION ON THE
STRAP AS NEEDED TO
TIGHTLY LATCH TANK
IN PLACE.)*

